

NL96BT

# Assembly Instructions


Thank you for purchasing this product from Global. Before you begin assembly, check that you have all the parts and hardware shown on this page.

If there is any item missing, circle the item, indicating quantity required and return to us by fax or mail:


**CANADA**  
Global Upholstery  
560 Supertest Road  
Downsview, Ont.  
M3J 2M6  
TEL. (416)661-3660  
FAX. (416)661-4300  
Attn.: Customer Service

**US**  
Global Industries Inc.  
17 West Stow Road  
P.O. 524  
Marlton, NJ 08053  
TEL. (856)596-3390  
FAX. (856)596-5684  
Attn.: Customer Service

**TOOLS REQUIRED**

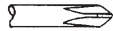

**PHILLIPS**  
Screwdriver size #2

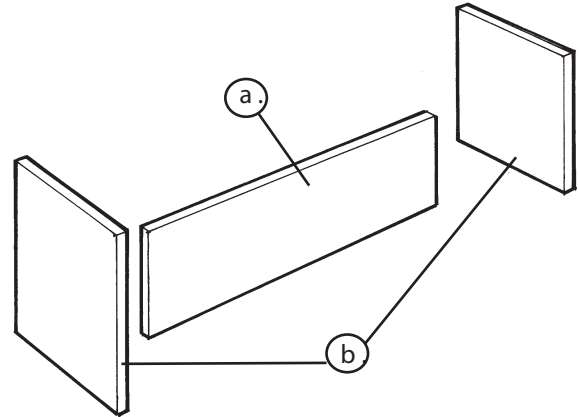

- a. Leg x2
- b. Modesty panel


**Notice to installers:**  
Open and assemble only one product at a time to avoid a potential mix up of parts and hardware.

It is advisable to assemble unit on a carpet to avoid scratches.

**NAIN 01 rev: 00 Hardware**

**GEN222**

Leveller 5/16"-18 x 15/16" Base,  
1 1/8" Stem

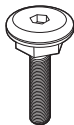

X 4

**FST066**

Minifix 15 Cam,  
Housing, 12.5mm Length



X 14

**FST070**

Minifix Connecting Bolt



X 14

**ABAG 36 Rev:01**

Step

1

FST066



X 14

FST070




X 6

GEN222



X 4

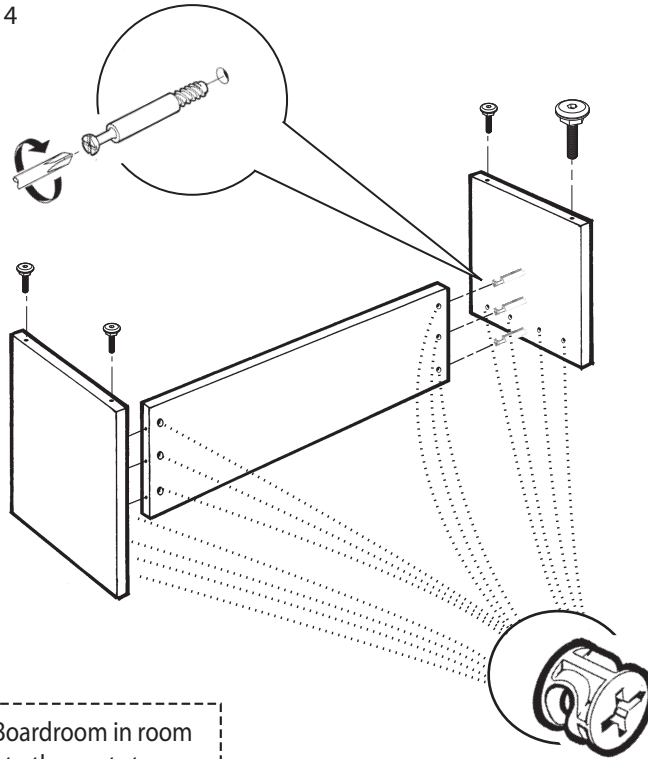

Locate and Level the Boardroom in room before you proceed to the next step.

Step

2

FST070



X 8

