









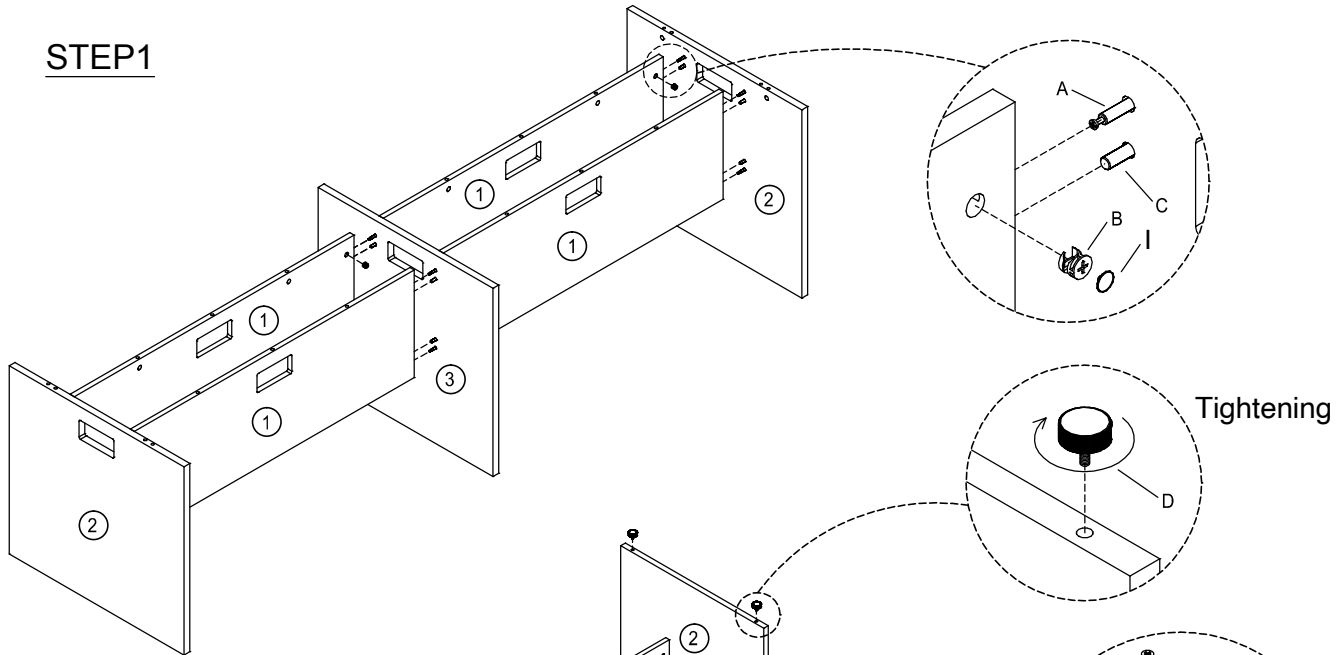


Rectangular Conference Table

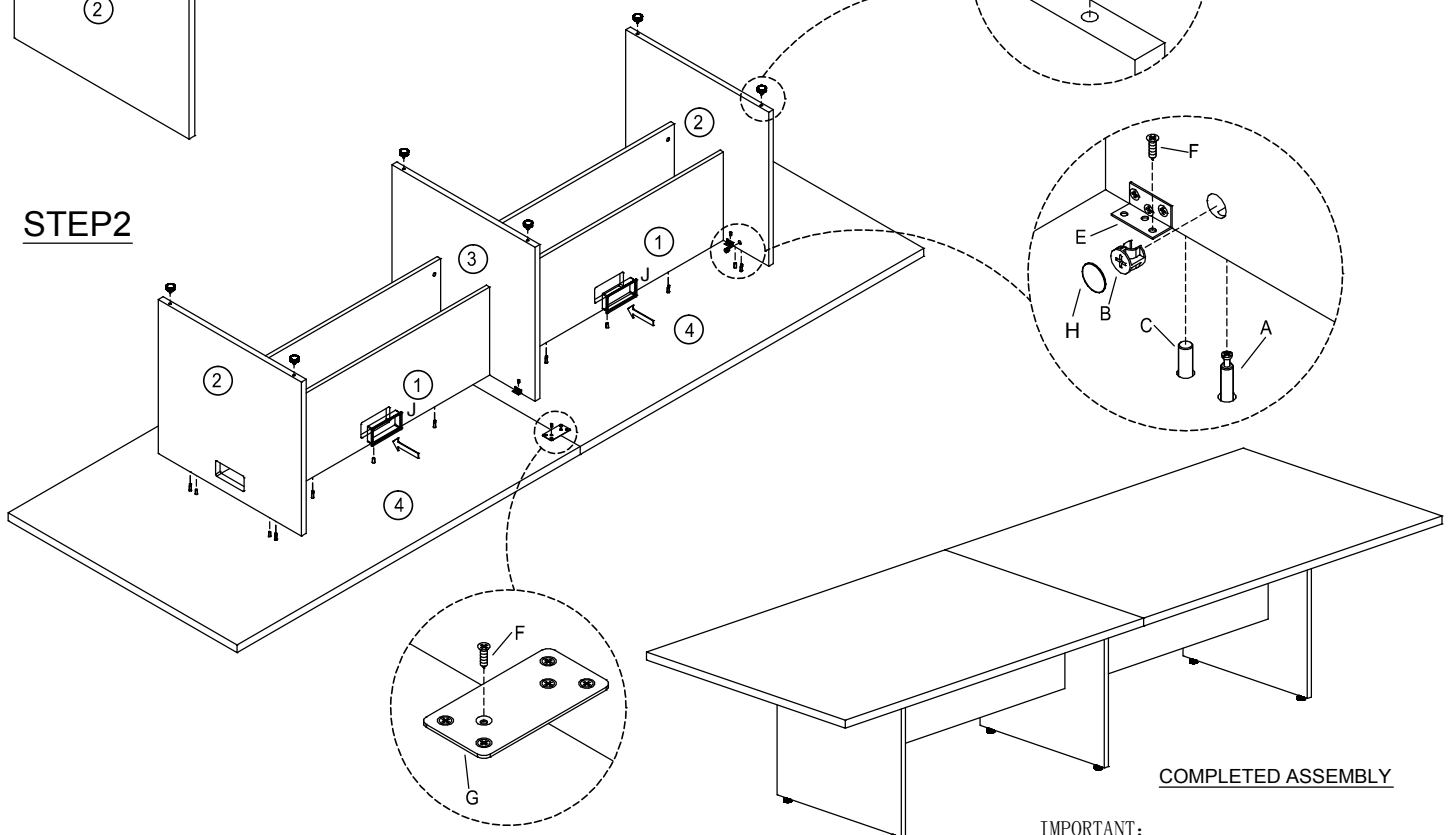
LO2/08-22

A 	B 	C 	D 	E 	F 	G 	H 	I 	J 
Cam Lock Pin 28+2Pcs	Cam Lock 28+2Pcs	Dowel 24+2Pcs	Glide 6Pcs	L-Bracket 6Pcs	Screw #4*5/8" 48+5Pcs	I-Bracket 2Pcs	Deep Camlock cap 4+2Pcs	Camlock cap 24+2Pcs	Grommet 6Pcs

STEP1



STEP2



COMPLETED ASSEMBLY

IMPORTANT NOTE:

- It is advisable to assemble unit on a carpet to avoid scratch.
- Check to be sure that you have all parts and hardware.
- Don't tighten all screws/bolts until all completely assembled.
- It is recommended to require 2 persons to complete the assembling.

IMPORTANT:

FUNCTION OF CAM



1/4 RIGHT
TURN FOR
LOCKING

MAKE SURE THE ARROW IS POINTING UPWARDS
BEFORE INSERTING INTO THE PANEL'S HOLE.