










### Half End Panel


For use to replace full end panel on returns and credenza shells

LO2/08-22

CONC10	CONC11	GLIDE	PLASTIC CAP	PLUG	PLUG	TUN013LB	TUN018SC	TUN0191B
<b>A</b>  Cam Lock Pin 1Pcs+1Pcs	<b>B</b>  Cam Lock 1Pcs+1Pcs	<b>C</b>  Glide 2Pcs	<b>D</b>  Plastic Cap 2Pcs+1Pcs	<b>E</b>  CAP FOR METAL INSERT 3Pcs+1Pcs	<b>F</b>  CAP FOR DOWEL HOLES 2Pcs+1Pcs	<b>G</b>  L-Bracket 2Pcs	<b>H</b>  Screw #4*1/2" 18Pcs+2Pcs	<b>I</b>  Flat Bracket 1Pc

#### STEP1

#### STEP1

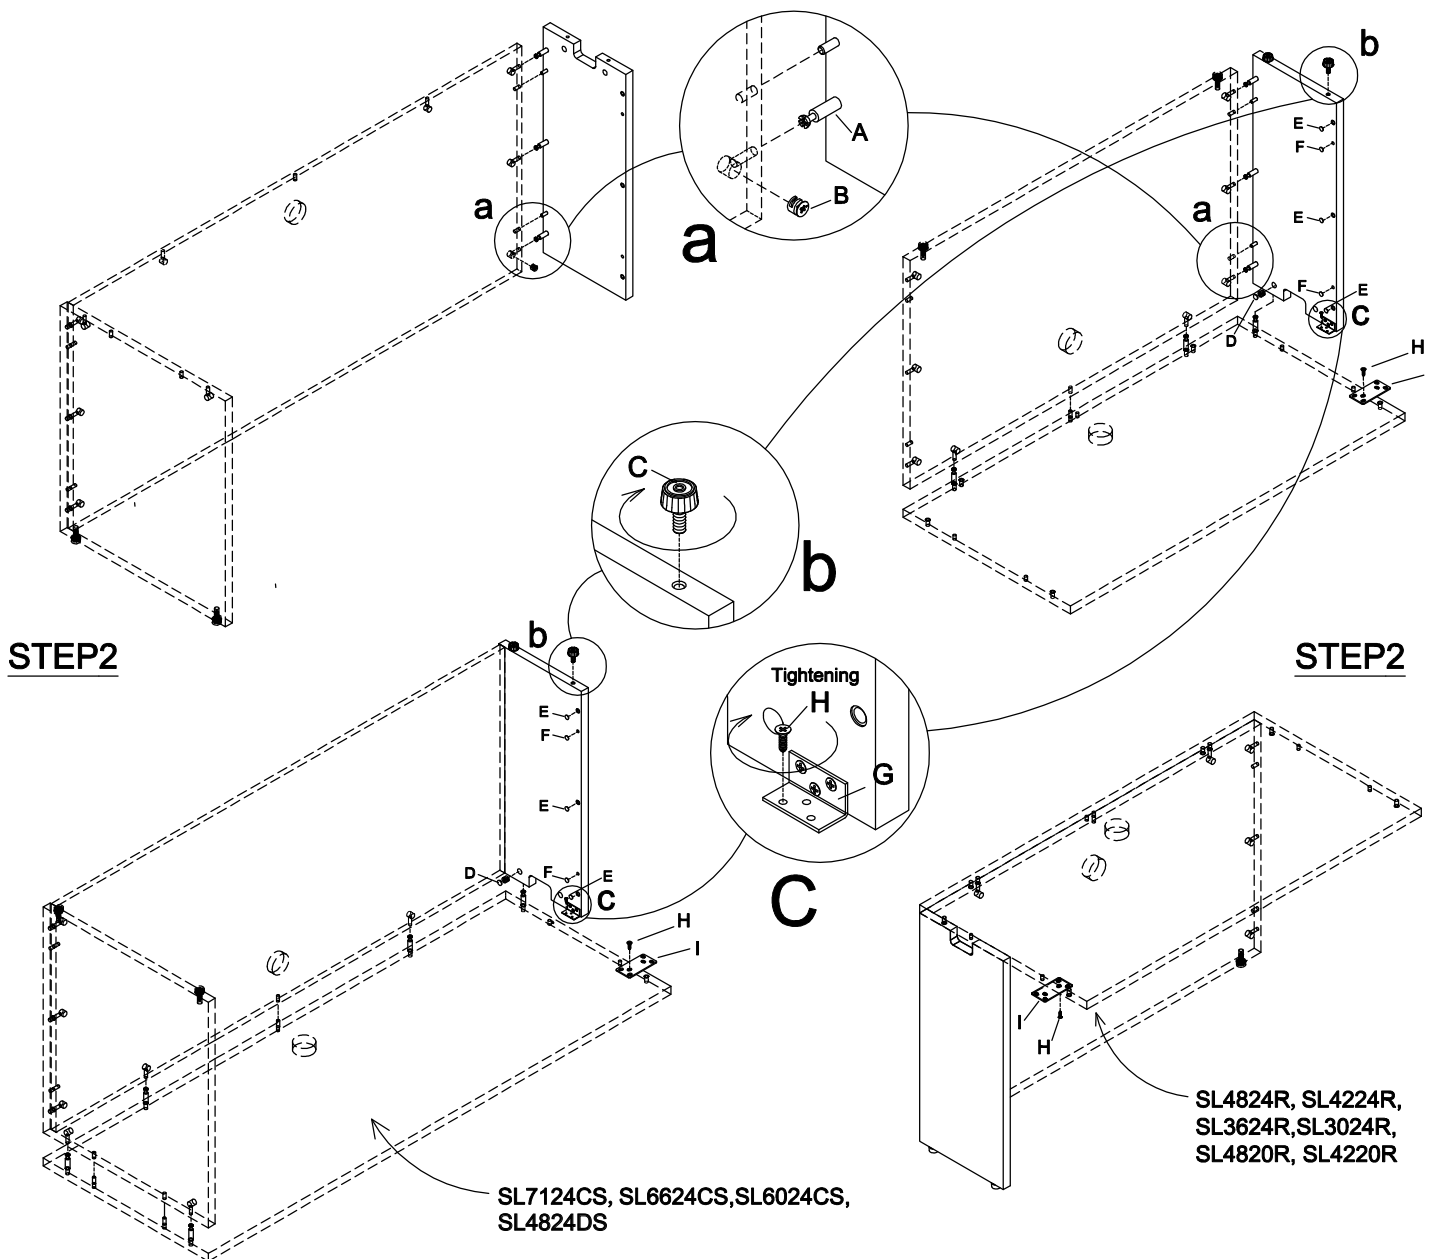

#### IMPORTANT NOTE:

- It is advisable to assemble unit on a carpet to avoid scratch.
- Check to be sure that you have all parts and hardware.
- Don't tighten all screws/bolts until all completely assembled.
- It is recommended to require 2 persons to complete the assembling.

#### IMPORTANT:

##### FUNCTION OF CAM



**1/4 RIGHT  
TURN FOR  
LOCKING**

MAKE SURE THE ARROW IS POINTING UPWARDS  
BEFORE INSERTING INTO THE PANEL'S HOLE.