








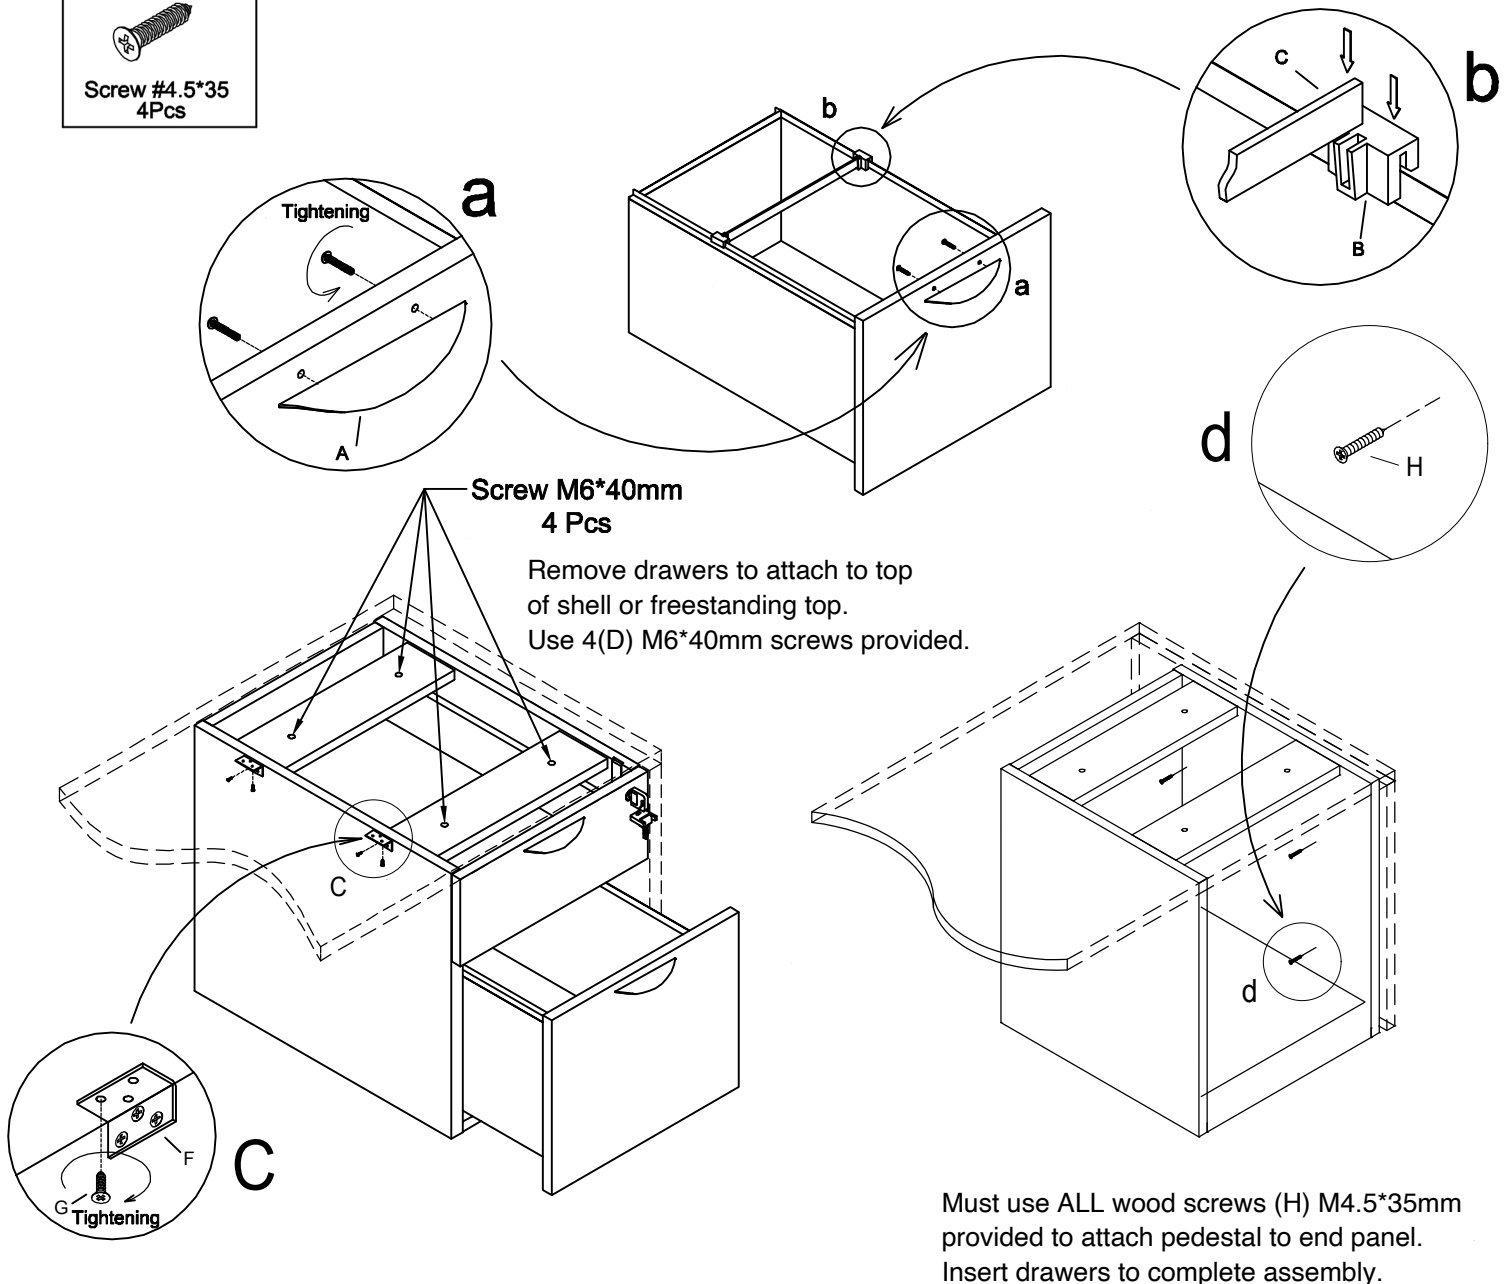


LO2/08-22

HANDLE	TUN001FC	TUN002AB	TUN027SC	KEYS	TUN013LB	TUN018SC
A  <p>96mm Metal Handle 2Sets</p>	B  <p>File Clip 2+1 Pcs</p>	C  <p>300*15*3mm Aluminium Bar 1Pcs</p>	D  <p>Screw M6*40mm 4Pcs</p>	E  <p>Keys 1Set</p>	F  <p>L-Bracket 2Pcs</p>	G  <p>Screw #4*5/8" 12+2Pcs</p>
WOOD SCREW						
H  <p>Screw #4.5*35 4Pcs</p>						



IMPORTANT NOTE:

- It is advisable to assemble unit on a carpet to avoid scratch.
- Check to be sure that you have all parts and hardware.
- Don't tighten all screws/bolts until all completely assembled.
- It is recommended to require 2 persons to complete the assembling.