












HANDLE	TUN001FC	TUN002AB	TUN027SC	KEYS	TUN013LB	TUN018SC
A  96mm Metal Handle 2Sets	B  File Clip 2+1 Pcs	C  300*15*3mm Aluminium Bar 1Pcs	D  Screw M6*40mm 4Pcs	E  Keys 1Set	F  L-Bracket 2Pcs	G  Screw #4*5/8" 12+2Pcs

WOOD SCREW
H  Screw #4.5*35 4Pcs



**Screw M6*40mm
4 Pcs**

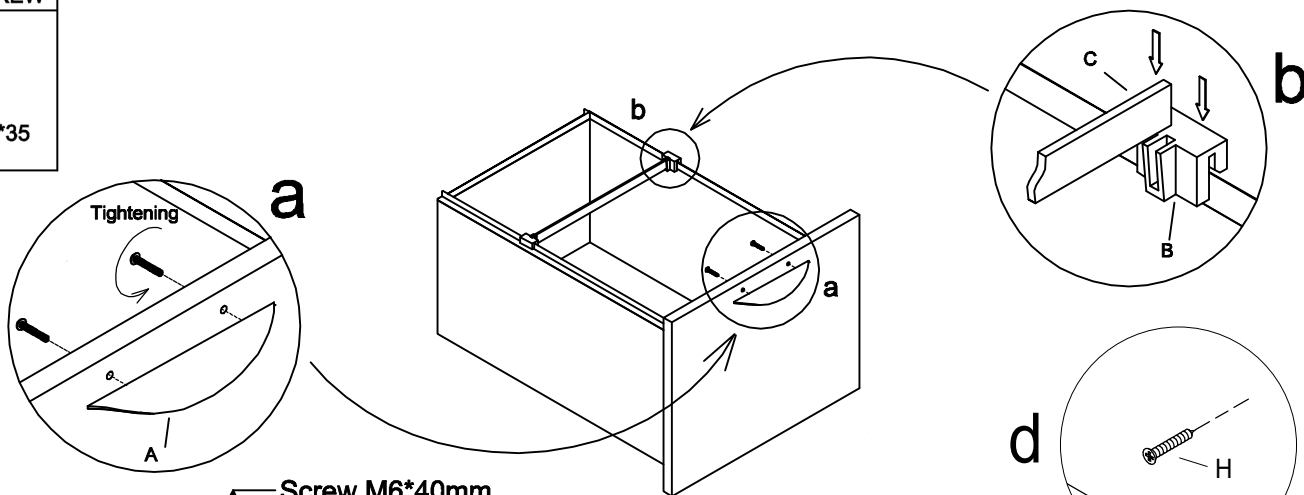Remove drawers to attach to top
of shell or freestanding top.
Use 4(D) M6*40mm screws provided.

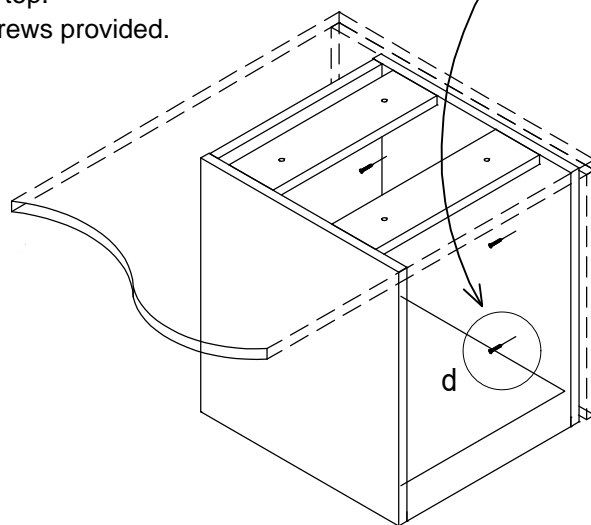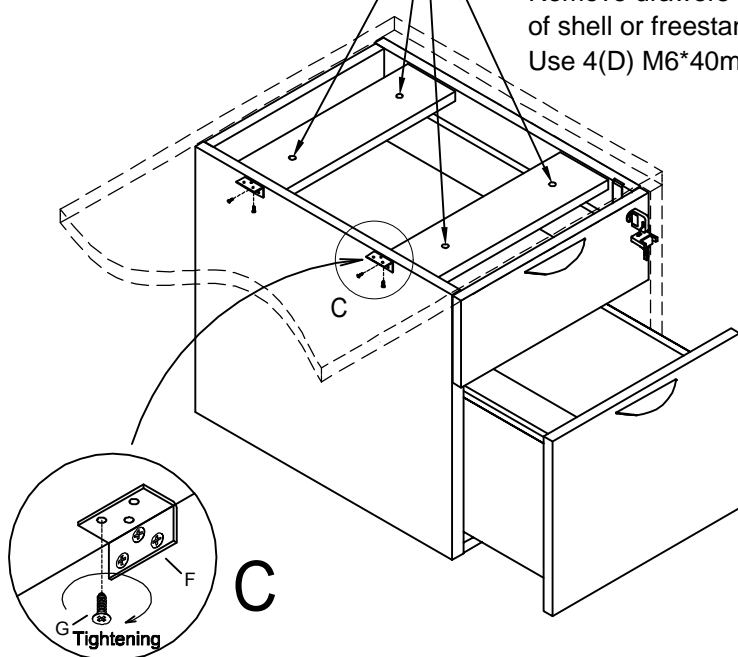

Must use ALL wood screws (H) M4.5*35mm
provided to attach pedestal to end panel.
Insert drawers to complete assembly.

IMPORTANT NOTE:

- It is advisable to assemble units on a carpet to avoid scratching the piece.
- Check to be sure you have all the parts and hardware.
- Don't tighten all screws/bolts until the item is completely assembled.
- Assembly requires two people.