








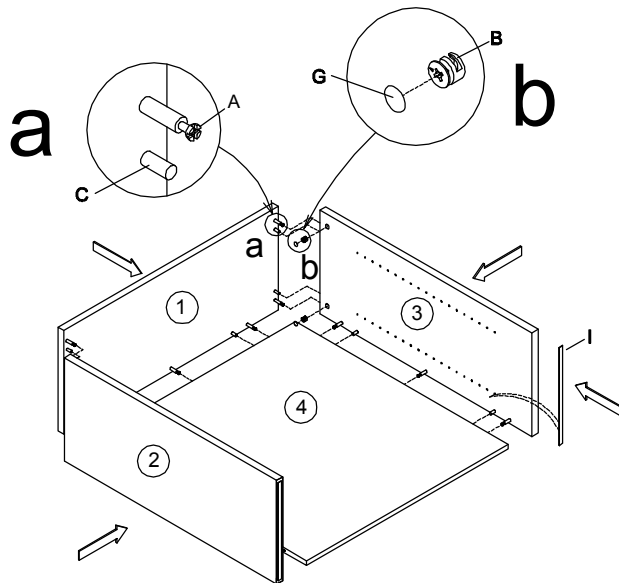


### Table Top Bookcase

LO2/08-22

CONC10	CONC11	DOWEL	SUPPORT	TUN018SC	FLAT BRACKET	PLASTIC CAP	PLASTIC CAP	EVA
<b>A</b>  Cam Lock Pin 13Pcs+2Pcs	<b>B</b>  Cam Lock 13Pcs+2Pcs	<b>C</b>  Dowel 10Pcs+2Pcs	<b>D</b>  Shelf Support 8Pcs+2Pcs	<b>E</b>  Screw #4*3/8" 14Pcs	<b>F</b>  Flat Bracket 2Pcs	<b>G</b>  DEEP CAMLOCK CAP 4Pcs+1Pcs	<b>H</b>  CAMLOCK CAP 9Pcs+1Pcs	<b>I</b>  ADHESIVE STRIP 2Pcs

#### STEP1



#### IMPORTANT:

##### FUNCTION OF CAM




**1/4 RIGHT  
TURN FOR  
LOCKING**


MAKE SURE THE ARROW IS POINTING UPWARDS  
BEFORE INSERTING INTO THE PANEL'S HOLE.

NOTE: CAP 'G' INSTALL ONTO 25MM PANELS;  
CAP 'H' INSTALL ONTO 18MM PANELS.

#### STEP2

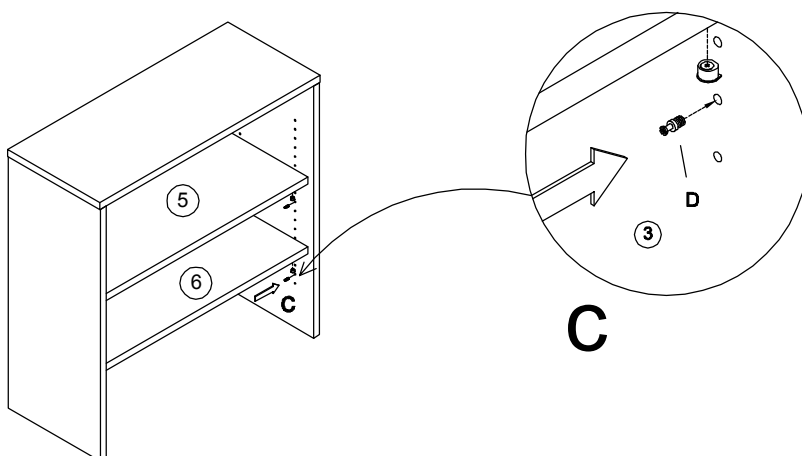

#### STEP3

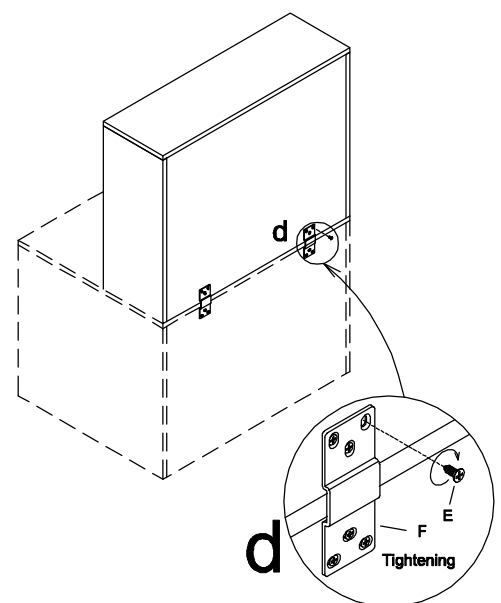

#### IMPORTANT NOTE:

- It is advisable to assemble unit on a carpet to avoid scratch.
- Check to be sure that you have all parts and hardware.
- Don't tighten all screws/bolts until all completely assembled.
- It is recommended to require 2 persons to complete the assembling.
- To secure HUTCH attach 2Pcs Flat Plates to back of HUTCH and back of lower unit.