





Assembly Instructions
MODEL NO.:SL36SIDR
Silver Aluminum Glass Door
For SL36WC and SL36HO


LO2/01-14

TUN023DH	BUMPER
A  Side Door Hinge 4Pcs	B  Bumper Plastic 2Each

NOTE:

M4*15.5 screws are used for attaching hinge to aluminum frame
M3.5*17 screws are used for attaching hinge to cabinet

STEP1

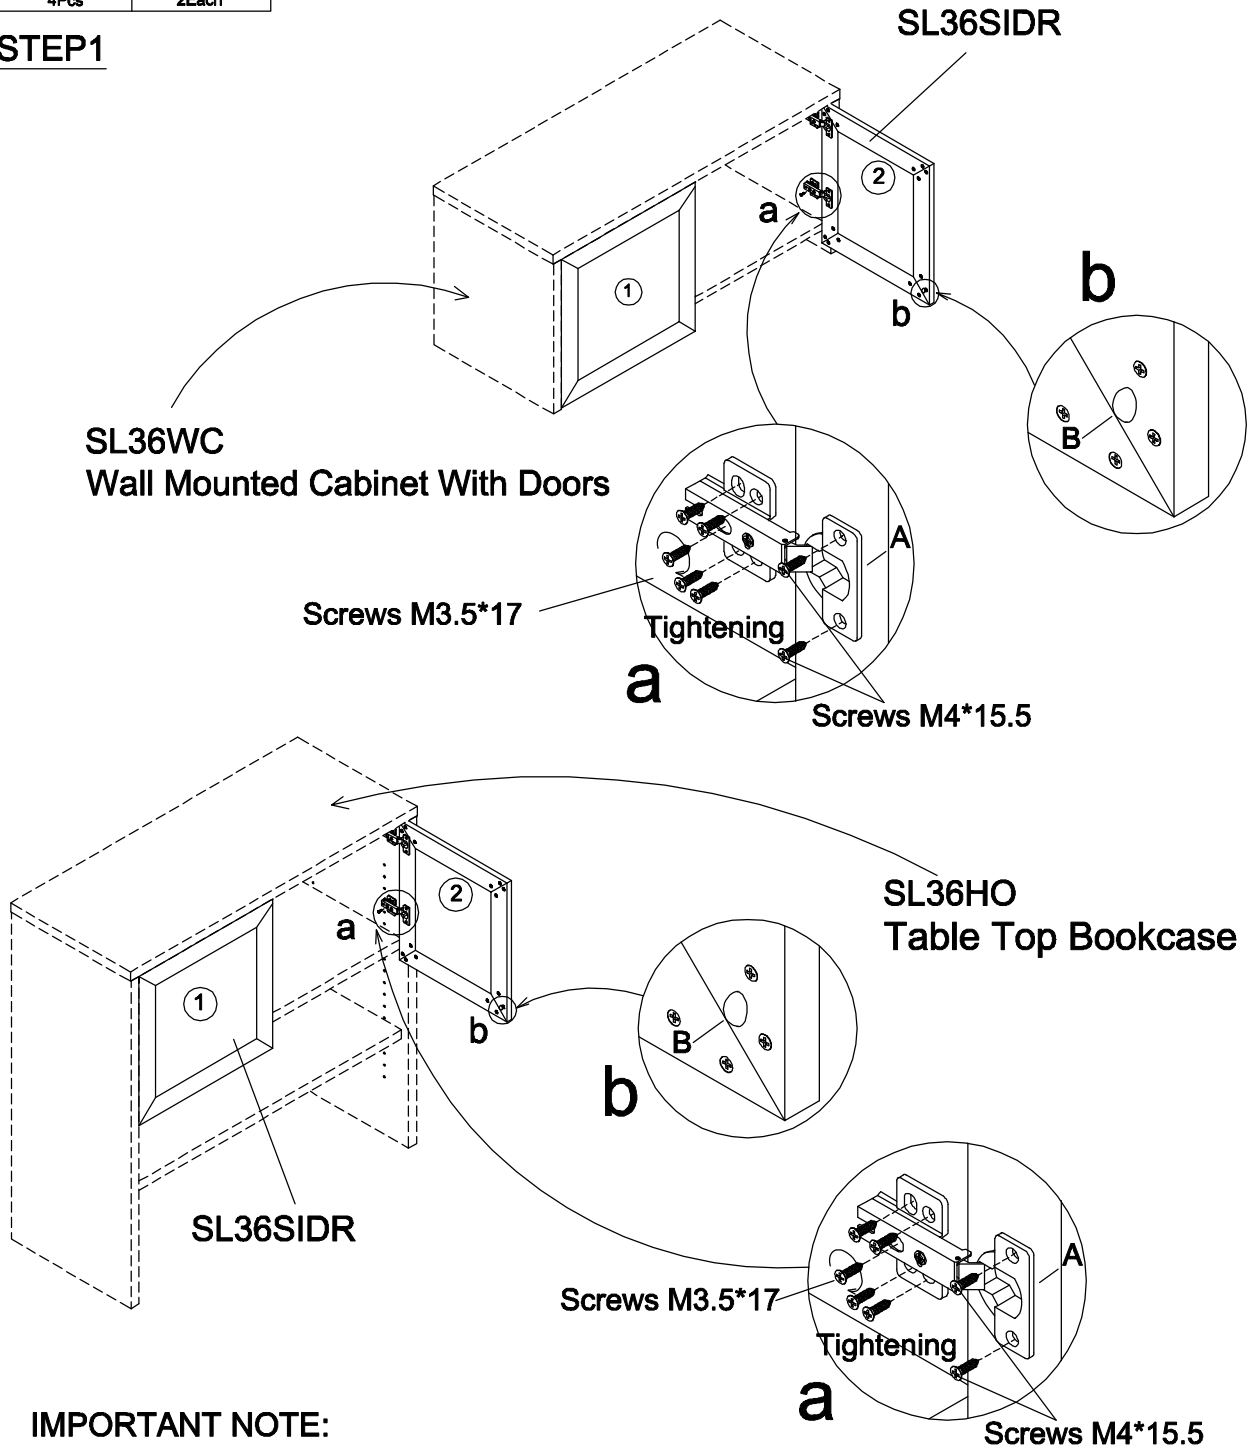

IMPORTANT NOTE:

- It is advisable to assemble unit on a carpet to avoid scratch.
- Check to be sure that you have all parts and hardware.
- Don't tighten all screws/bolts until all completely assembled.
- It is recommended to require 2 persons to complete the assembling.
- To secure HUTCH attach 2Pcs Flat Plates to back of HUTCH and back of lower unit.