







Reception Transaction Top - Frosted Glass

LO2/08-22


A  Cam Lock Pin 6+2Pcs	B  Cam Lock 6+2Pcs	C  Riser Pin 2Pcs	H  Deep Camlock cap 4+2Pcs	I  Camlock cap 2+2Pcs
---	---	--	--	--

*Please note the H & I are packed with SL7130RDSNT

STEP1

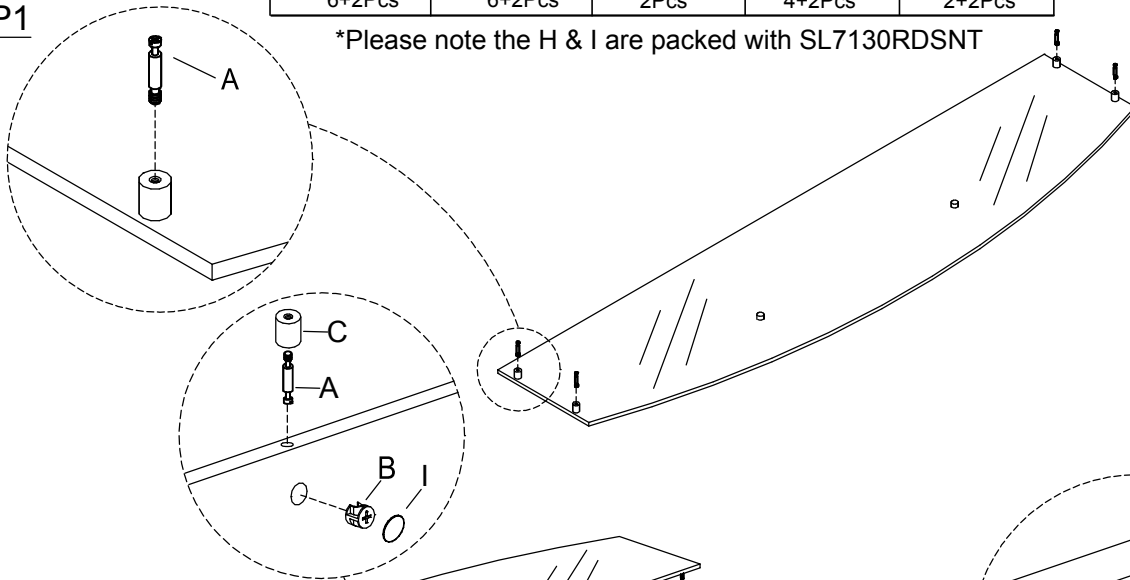


STEP2

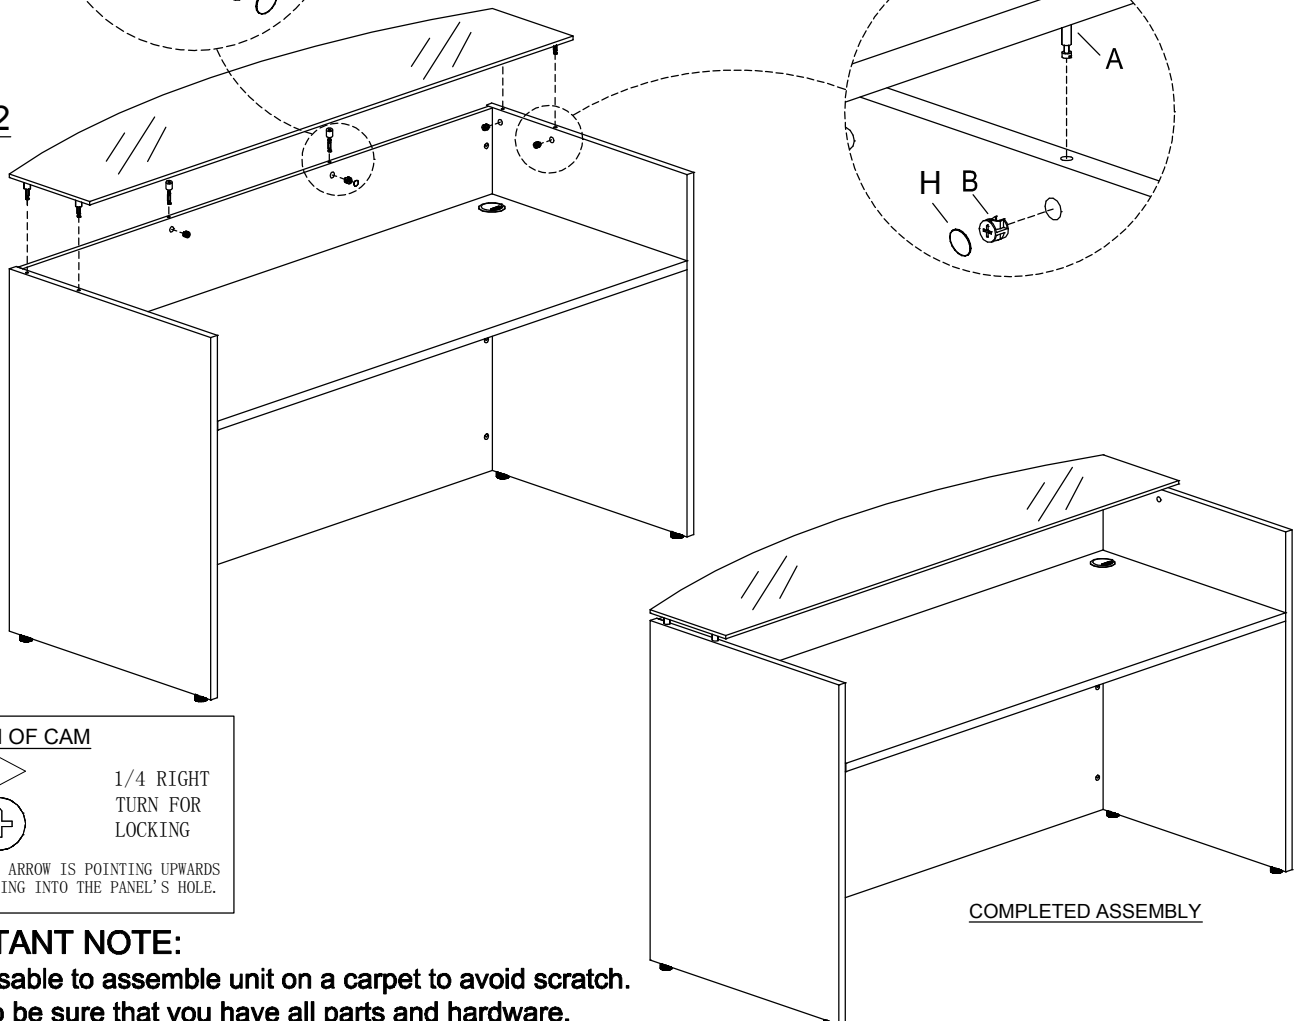

IMPORTANT:

FUNCTION OF CAM



1/4 RIGHT
TURN FOR
LOCKING

MAKE SURE THE ARROW IS POINTING UPWARDS
BEFORE INSERTING INTO THE PANEL'S HOLE.

IMPORTANT NOTE:

- It is advisable to assemble unit on a carpet to avoid scratch.
- Check to be sure that you have all parts and hardware.
- Don't tighten all screws/bolts until all completely assembled.
- It is recommended to require 2 persons to complete the assembling.

COMPLETED ASSEMBLY