


Assembly Instructions
MODEL NO.: SL60SIDR
SL66SIDR, SL71SIDR

Silver Aluminum Glass Door


LO2/08-22



NOTE:

M4*15.5 screws are used for attaching hinge to aluminum frame M3.5*17 screws are used for attaching hinge to cabinet

STEP1

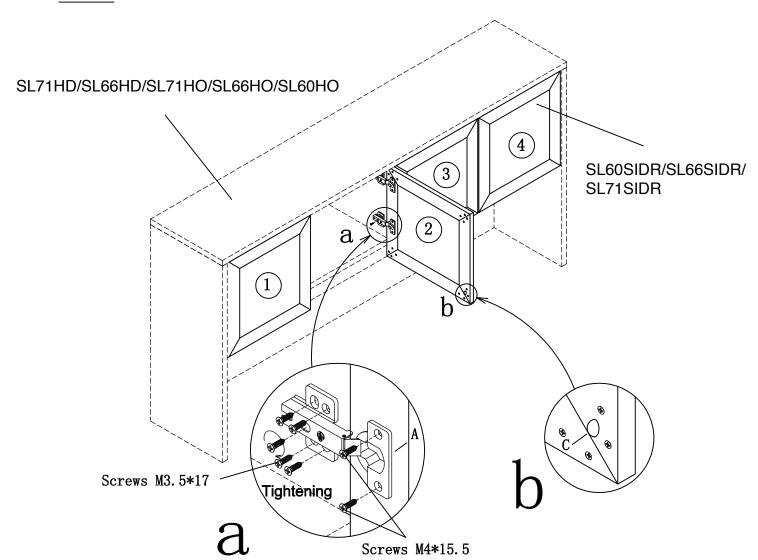

IMPORTANT NOTE:

- ·It is advisable to assemble unit on a carpet to avoid scratch.
- ·Check to be sure that you have all parts and hardware.
- Don't tighten all screws/bolts until all completely assembled.
- ·It is recommended to require 2 persons to complete the assembling.