


Assembly Instructions
MODEL NO.:
SLAP71, SLAP60, SLAP48

Worksurface Acrylic Panel

LO2/08-22

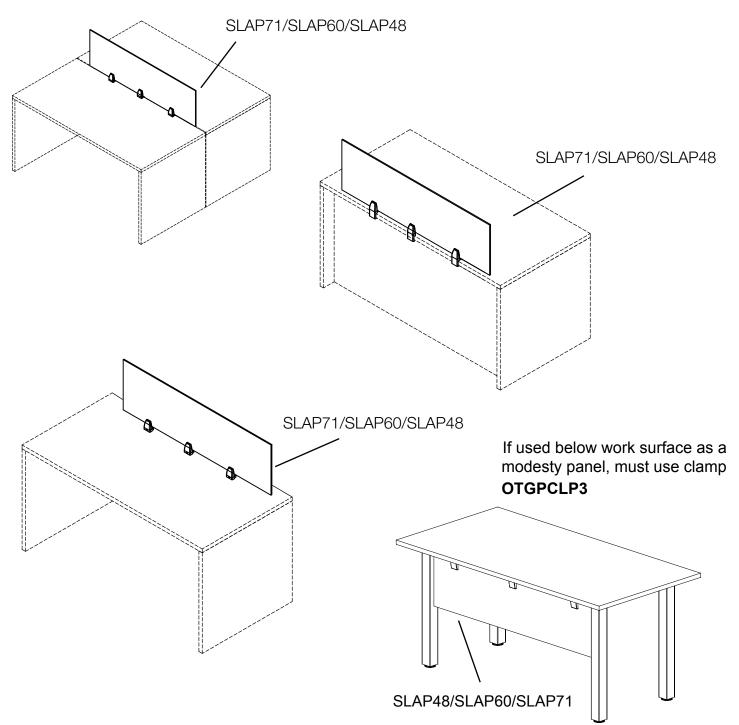

IMPORTANT NOTE:

- ·SLAP48: 2 Individual Clamps (OTGPCLP1/2/3) required per panel
- ·SLAP60: 3 Individual Clamps (OTGPCLP1/2/3) required per panel
- ·SLAP71: 3 Individual Clamps (OTGPCLP1/2/3) required per panel
- ·It is advisable to assemble unit on a carpet to avoid scratch.
- ·Check to be sure that you have all parts and hardware.
- Don't tighten all screws/bolts until all completely assembled.
- ·It is recommended to require 2 persons to complete the assembling.