


Assembly Instructions MODEL NO.:SLAP71/SLAP66/SLAP60/SLAP54/SLAP48

Acrylic Panel for Worksurface

LO2/10-19

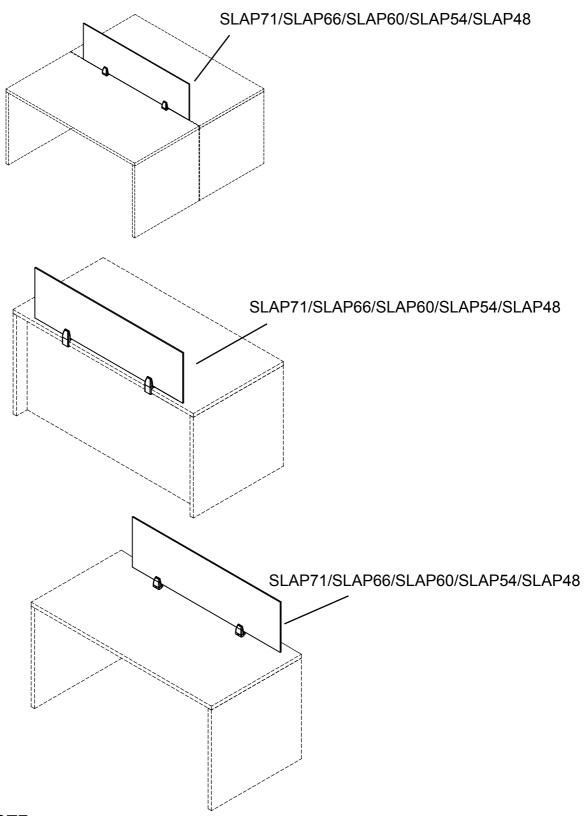

IMPORTANT NOTE:

- ·It is advisable to assemble units on a carpet to avoid scratching the piece.
- ·Check to be sure you have all the parts and hardware.
- -Don't tighten all screws/bolts until the item is completely assembled.
- ·Assembly requires two people.